Contents	01
English language contents	01

Further instructions	11
Instructions during use	11

Check Various Accessories	02
Chair accessories	02
•ther accessories	•3
Quick Reference Guide	•3

Assembly Instructions	04
Chair assembly	04
Attach headrest cushion	•8
Attach lumbar cushion	09

Product Specifications	10
Detailed specifications	10

This manual will explain the basic installation and operation of DXRACER® R Series
Chair Link for videos online: https://vimeocom/user86375354

Chair accessories

Please check and ensure that the following things are in the package. Please call the local distributor for help if something is not included.

☐ 1×Seat

□ I×Base

Chair accessories



 
□ 1×Backrest



☐ 1× Hydraulic unit Plastic cover

☐ 5×Casters







☐ 1×Plastic cover right hand side



☐ 5×Base plastic cover



☐ 1×M8 Allen Key





☐ 1×Lumbar cushion

· After-sales Service Guide Warranty card and filled in sample card included.

Includes the following:

Please read before using This file includes Chair Maintenance and Product Specifications.

• Quick Reference

R series Chair Quick Reference Guide

2. ther accessories



☐ 1×Headrest cushion





☐ 1×Plastic butterfly clip

02


•3

2. Attach plastic covers on base


This end facing forward

1. Attach wheels

3. Install the hydraulic unit and the plastic cover

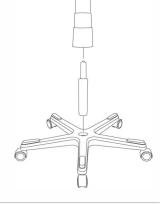

5. Using the M8 Allen key remove the screws on the side of the backrest and use to attach the backrest to the seat. (Screws come already fixed to the sides of

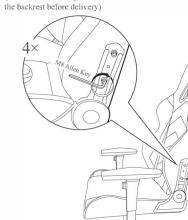


05


4. Attach the backrest to the seat

English

6. Fix the plastic covers onto the sides of the backrest

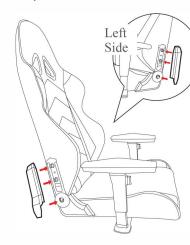

7. Fix the control unit to the base of the seat (Screws have been fixed to the seat base at the factory prior to delivery. Please note the direction of the control unit should be on the right.)

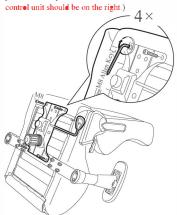

8. Insert the hydraulic unit into the opening of the control unit






06 07

Attach headrest cushion

Attach Headrest cushion Method One

1. Put headrest cushion on the backrest

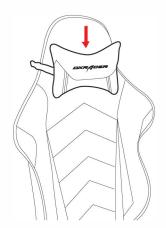


Attach Headrest cushion Method Two

1. Insert the elastic through the plastic hole



 2. Tighten the elastic using the butterfly clip




3. Complete the assembly as shown




Attach lumbar cushion

 1. Lead the elastic through the aperture as shown



2. Attach belt clips together

 


3. Adjust cushion as desired



•8 •9

Product Specifications

Detailed specifications

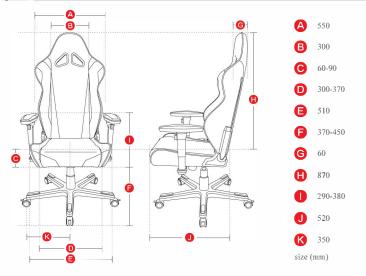

Instructions during use

- 1. Please move the product gently to avoid collision;
- 2.Please keep out of direct sunlight;
- 3. Please ensure the centre of gravity is on the hydraulic unit during use;
- 4. Please watch your fingers when adjusting the backrest angle;
- 5.Please toggle the handle under your seat when adjusting the chair height, do not to press it down roughly;
- 6.Please lift the lever gently to raise or lower the height of the chair. Do not pull it roughly;
- 7.Do not place any heavy objects on the chair or armrests;
- 8. Plastic parts will split if chair is exposed to direct sunlight;
- 9. Please do not use abrasive cleaners on the chair;
- 10. We recommend you use Pledge to clean the chair.

English